





Furnitures accessories

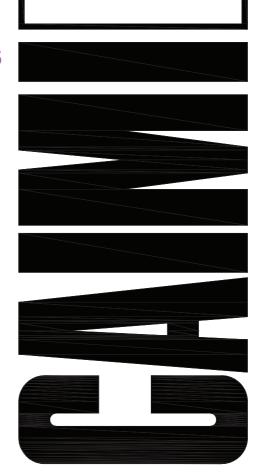

MASTER QUICK

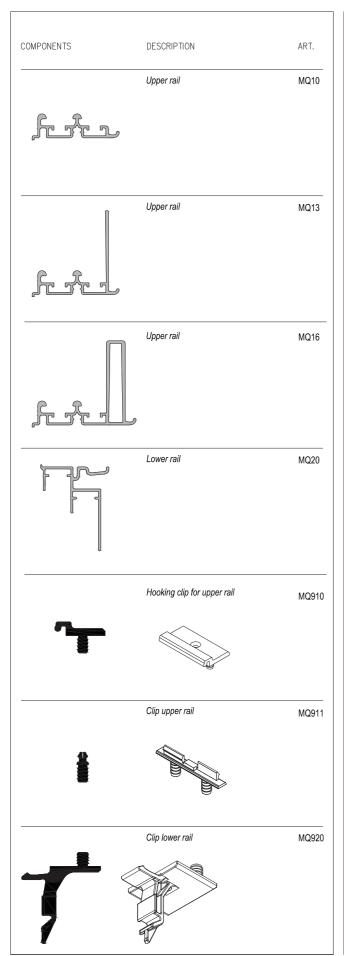

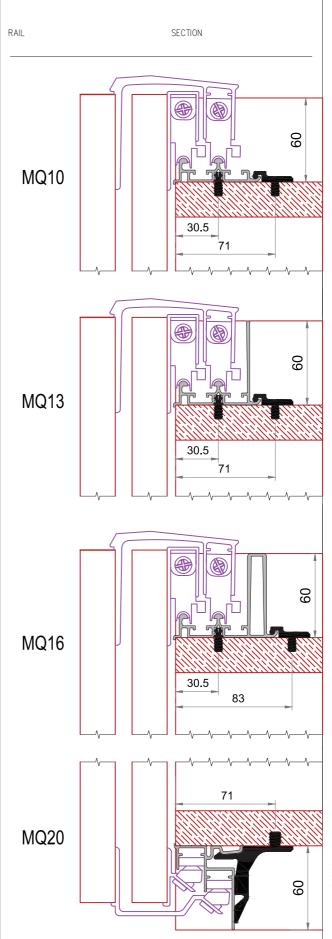

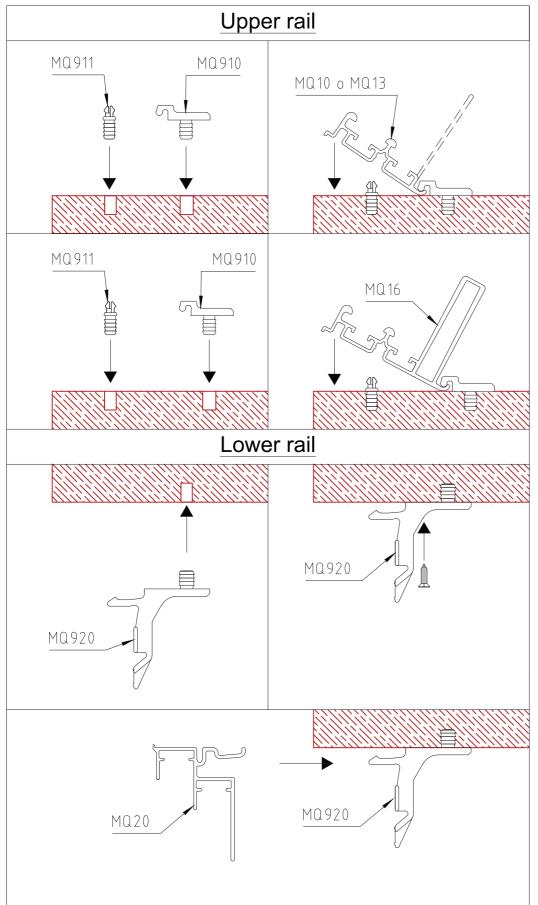



ASSEMBLY OF THE UPPER RAIL TO THE TOP

- Fix hooking and clip to the top of the wardrobe as indicated in the drawing
- Insert the upper rail into the clip
- Turn it and hook to the clip

ASSEMBLY OF THE LOWER RAIL TO THE BOTTOM OF THE FURNITURE

- Fix clip to the bottom of the wardrobe as indicated in the drawing
- Block the clip with a screw.
- Insert the lower rail up to hook it to the clip.

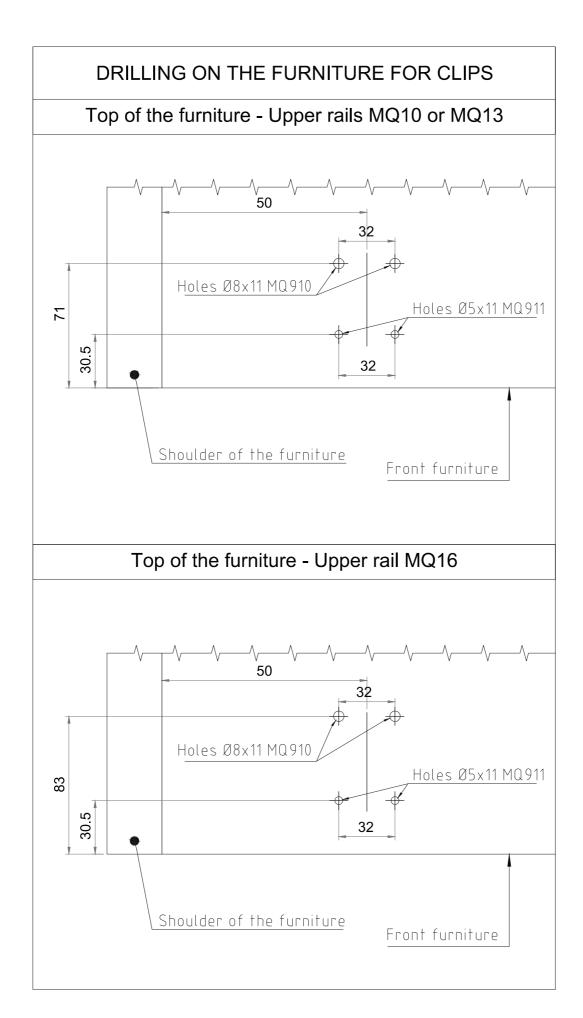

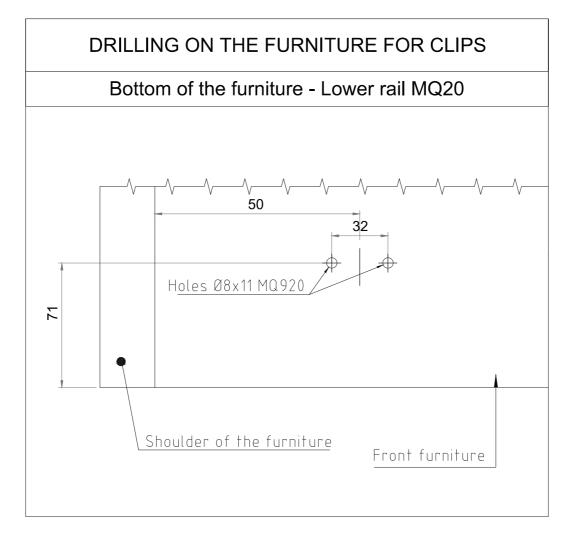

The recommended distance between a clip and the another is 400 mm